

## TABLE OF CONTENTS

|          |                               |  |  |
|----------|-------------------------------|--|--|
| <b>1</b> | <b>Before driving</b>         | Adjusting and operating features such as door locks, mirrors, and steering column.                           |  |
| <b>2</b> | <b>When driving</b>           | Driving, stopping and safe-driving information.  |  |
| <b>3</b> | <b>Interior features</b>      | Air conditioning and audio systems, as well as other interior features for a comfortable driving experience. |  |
| <b>4</b> | <b>Maintenance and care</b>   | Cleaning and protecting your vehicle, performing do-it-yourself maintenance, and maintenance information.    |  |
| <b>5</b> | <b>When trouble arises</b>    | What to do if the vehicle needs to be towed, gets a flat tire or is involved in an accident.                 |  |
| <b>6</b> | <b>Vehicle specifications</b> | Detailed vehicle information.  |  |
| <b>7</b> | <b>For owners</b>             | Reporting safety defects for U.S. owners and seat belt instructions for Canadian owners.                     |  |
|          | <b>Index</b>                  | Alphabetical listing of information contained in this manual.  |  |